


RC Choo Choo Playset

60-2789

OWNER'S MANUAL — Please read before using this equipment.

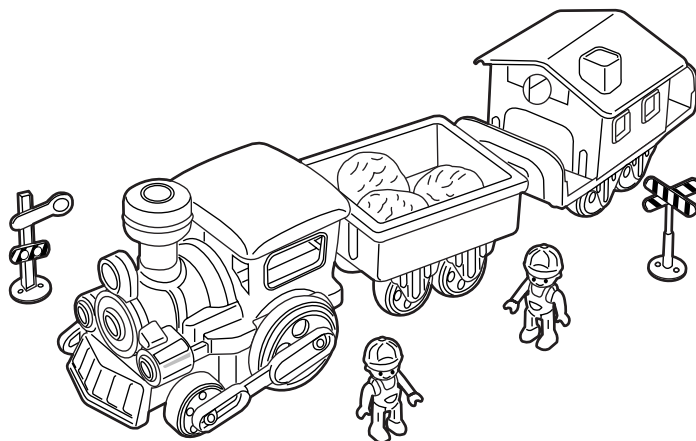

! IMPORTANT !

If an icon appears at the end of a paragraph, go to the box on that page with the corresponding icon for pertinent information.

⚠ — Warning

⚡ — Caution

! — Important

✓ — Note

Thank you for purchasing a RadioShack RC Choo Choo Playset. Your Choo Choo can reach speeds of up to 150 feet per minute. It makes realistic choo-choo sounds when it is moving, and its cars are detachable. It's perfect for kids who love choo choos, ages three and up.

Your choo choo includes one engine, detachable coal car and caboose, and 3 pieces of coal, 2 road signs, and 2 play figures.



RadioShack®

www.radioshack.com™

© 2002 RadioShack Corporation.
All Rights Reserved.

RadioShack and RadioShack.com are trademarks used by
RadioShack Corporation.

⚡ CAUTION ⚡

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- If you do not plan to use the choo choo for several days, remove the batteries. Batteries can leak chemicals that can damage the electronic parts.

⚠ WARNING ⚠

Dispose of old batteries promptly and properly; do not burn or bury them.


INSTALLING BATTERIES

You need two AA batteries to power the engine, and one 9V battery for the transmitter (neither supplied). For the best performance and longest life, we recommend RadioShack alkaline batteries. ⚡

When the engine stops operating properly, replace the batteries. The engine's battery life is about 40 minutes with continuous driving. ⚠ ⚡

IN THE ENGINE


1. Slide **ON/OFF** on the bottom of the engine to **OFF**.

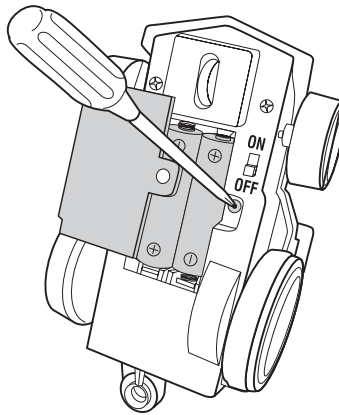

2. Use a Phillips screwdriver to remove the battery compartment cover's screw from the bottom of the engine, then remove the cover.
3. Place two AA batteries in the compartment as indicated by the polarity symbols (+ and -) marked inside.
4. Place the battery compartment cover's tabs into the slots on the battery compartment. Then replace the cover and secure it with the screw.

IN THE TRANSMITTER

1. Use a Phillips screwdriver to remove the battery compartment cover's screw. Then remove the cover.
2. Place a 9V battery in the compartment according to the polarity symbols (+ and -) marked inside.
3. Place the battery compartment cover's tabs into the slots on the

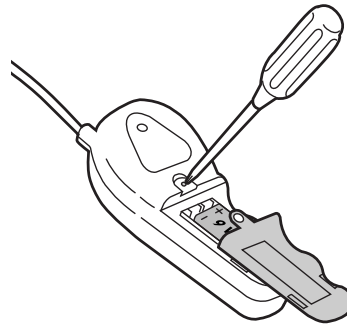

battery compartment. Then replace the cover and secure it with the screw.

HOOKING UP/ UNHOOKING THE CARS





The choo choo comes with one detachable coal car and caboose. To detach the caboose or coal car, remove the connector's hook from the anchor's loop.

To attach the cars, insert the connector's hook into the anchor's loop.

DRIVING YOUR CHOO CHOO

CAUTION

Do not play with your choo choo in the street.

1. Slide **ON/OFF** on the bottom of the engine to **ON**. 
2. Hold down  to move forward. You hear realistic choo-choo sounds.
3. Release  to stop.
4. Hold down  to circle clockwise backward.

5. When you finish driving the choo choo, slide **ON/OFF** to **OFF**.

HELPFUL HINTS

These hints can help you get the most enjoyment from your choo choo.

- Running your choo choo continuously for long periods generates high heat levels. Heat causes wear and tear on the motor. To help keep heat levels down, when your choo choo's battery power dies, let the choo choo cool at least 10 minutes before installing new batteries.
- If the choo choo's motor runs but the choo choo does not respond to the transmitter, move the transmitter closer to the choo choo and try again. The control distance is about 30 feet.
- If someone uses a CB nearby, it might interfere with control of the choo choo. If this happens, move the choo choo away from the CB.
- You cannot operate your choo choo near devices with

transmitters that use the same frequency (27 MHz).

THE FCC WANTS YOU TO KNOW

Your choo choo might cause TV or radio interference even when it is operating properly. To determine whether your choo choo is causing the interference, turn off your choo choo. If the interference goes away, your choo choo is causing it. Try to eliminate the interference by:

- moving your choo choo away from the receiver
- contacting your local RadioShack store for help

If you cannot eliminate the interference, the FCC requires that you stop using your choo choo.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this product not expressly approved by RadioShack, or operation of this product in any way other than as detailed by the Owner's Manual, could void your authority to operate the product.

CARE

Keep the choo choo dry; if it gets wet, wipe it dry immediately. Use and store the choo choo only in normal temperature environments. Handle the choo choo carefully; do not drop it. Keep the choo choo away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

If your choo choo is not performing as it should, take it to your local RadioShack store for assistance. Modifying or tampering with the choo choo's internal components can cause a malfunction and might invalidate its warranty and void your FCC authorization to operate it.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company- owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, crash, collision, impact, violent contact, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99

RadioShack Corporation
Fort Worth, Texas 76102

60-2789
06A02
Printed in China